


Installation Instructions for PLE 1 Blinds for ACG and AAG Fixed and Opening Skylights

1. Preparing the skylight prior to installing the blind:

In most cases, the blinds are installed in the skylight after the skylight is installed on the roof, the blinds are installed from the interior side.

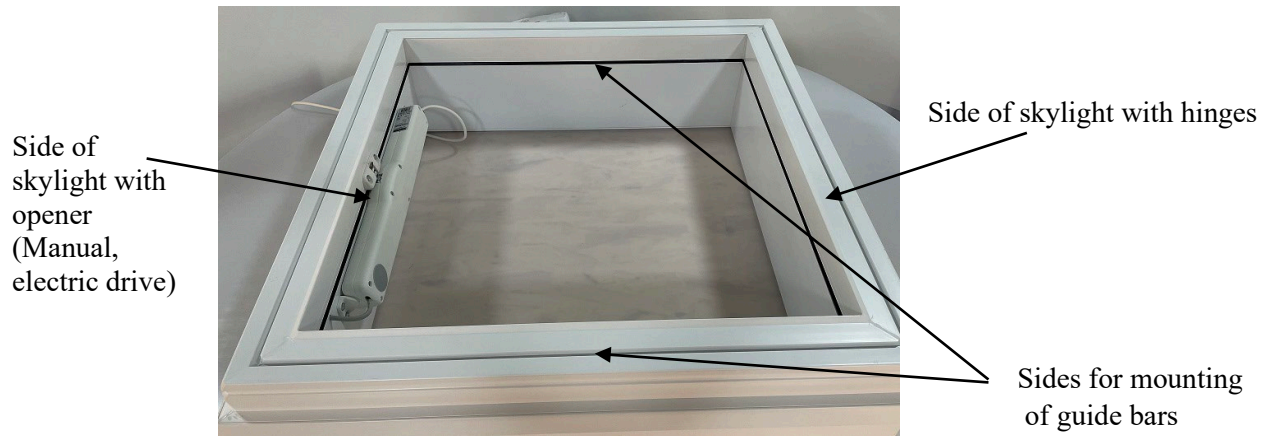

The package contains: Pleat blinds, type A mounting fixtures, cover bars, fasteners and a hand grip




2. Setting the blinds in the skylight:

Opening wing – type A fixtures are anchored to the opening frame above the upper bracket of the skylight drive.

Fixed wing – type A fixtures are anchored directly into the skylight upstand (into the subframe).


A

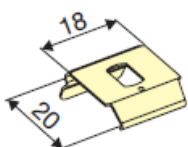

Divide the number of fixtures in the package in half, anchor half of the fixtures on one side and the other half on the opposite side of the skylight.



3. Mounting the blinds into skylight:

First, install the attached fixtures – place the outermost fixtures of the blind 5 cm from the inner corners of the skylight frame (cuff) Pic. 1. Divide the remaining number of brackets evenly over the remaining length between the outermost fixtures. Screw the fixtures with the screws provided. The top edge of the fixture must be flush with the top edge of the skylight. Next, anchor the blind fixtures to the opposite side of the skylight Pic. 2.

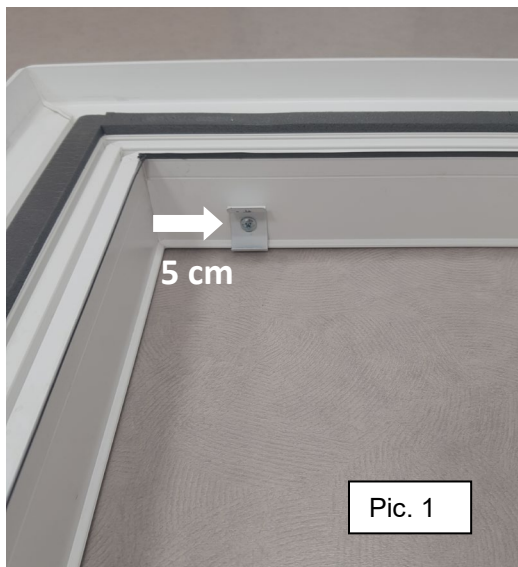


Unpack the blind from its packaging and unfold it to the open position. Click the blinds into the mounted blind holders, see Pic. 3. The opposite side of the blinds is screwed into the mounted brackets in the same way.

The cables are pre-tensioned, so it is necessary to use more force to push the blinds into the brackets, or to remove the beaks of the brackets with pliers.

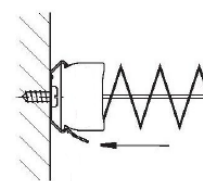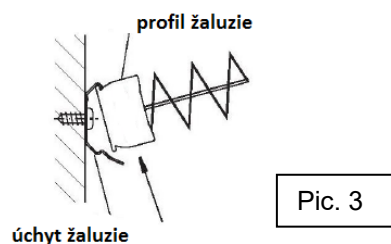

Now tension the blind guide cables, push the tensioning mechanism and move it towards the far corner – Pic. 4. In this way, the guide ropes are tensioned.

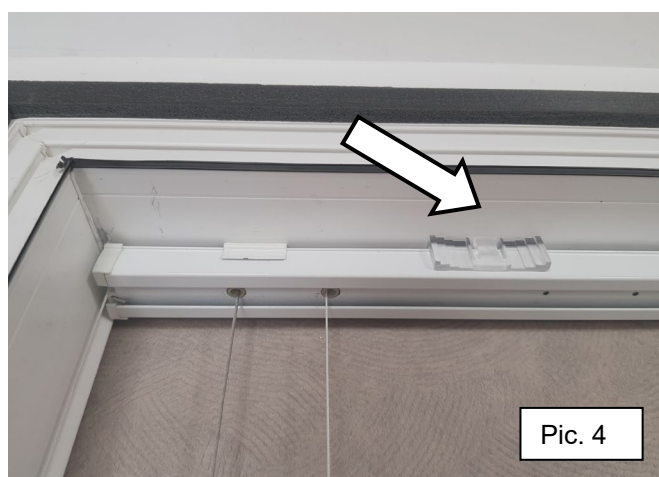

4. Installation of guide bars:

Pre-drill the holes for the bars, the bars are parallel to the opening frame (upstand) and follow the blind Pic. 3. The front of the blind rides about 1 mm above the surface of the bar, the fabric of the blind lightly touches the bar. Screw the bars in place with the screws provided, in the holes prepared. The guide bars are used to keep the blinds running smoothly and to eliminate sagging of the blinds in the skylight.



Before screwing in, make sure that the cover strip is parallel to the bottom edge of the frame.

5. Skylight from the interior after installation of the PLE 1 blind:

